



# **INSTRUCTION MANUAL**

## **PIR47**

**360° PIR Presence  
Motion Sensor**



**Indoor Installation**

1. INTRODUCTION

The PIR47 automatically turns on lights or any electrical device within the sensors rated load, when motion and body heat is detected. It has a 360° PIR presence sensor with a detection area of 6m and a maximum height of 6m, as well as normal PIR motion detection up to 12m with adjustable settings for time and Lux level, easily integrating into new or existing installations. With an IP20 rating, the sensor is intended for indoor installations. Installation must be done by a qualified electrician.

2. SPECIFICATIONS

Function	Range
Voltage	220 - 240V AC
Power Frequency	50/60 Hz
Ambient Light	<3 - 2000 Lux
Time Delay	10 sec (±3 sec) to 30 min (±2 min)
Rated Load	2000W Incandescent/ 1000W LED/CFL
Detection Area	360°
Detection Distance	6m Presence, 20m Movement
Detection Motion Speed	Presence
Installation Type	Ceiling Mountable

Function	Range
Working Temperature	-20~40°C
Working Humidity	<93% RH
Power Consumption	Approx. 0.5W
Installation Height	2.2 - 6m
IP Protection	IP20 Indoor
Swivel Head	No
Warranty	5 years
Standards	IEC 60669-1, IEC 60669-2-1 AS/NZS 60669-1, AS/NZS 60669-2.1

3. FUNCTION

a. Sensor Can identify between day and night (Lux Mode):

The consumer can adjust working state in different ambient light. It can work in the day time and at night when it is adjusted on the “☀” (sun) position (max). It can work in the ambient light less than 3 LUX when it is adjusted on the “3” position (min). As for the adjustment pattern, please refer to the testing pattern.

b. Time-Delay is added continually:

When the sensor detects movement while the light is already on, the countdown timer resets. This means the light will remain On for the full set duration from the moment of the latest detection.

c. Adjustable Time Delay:


The sensor can be set according to the consumer's desire (10s, 30s, 90s, 5min, 10min, 30min)

4. CONTROL SETTING INFORMATION

- Turn the TIME knob anticlockwise to the minimum (10s). Turn the LUX knob clockwise to the maximum ☀ (Sun).
- Switch on the power; the sensor will require 30 seconds to warm up. Once the sensor detects movement, the lamp will turn On. If no other movement is detected within the time duration set, the light will turn
- Off within the 10 seconds ±3 sec.
- Turn the LUX knob anticlockwise to the minimum (3). If the ambient light is more than 3 Lux, the sensor is not able to function. If the ambient light is less than 3 Lux (dark), the sensor will operate.


**Note:** When testing in daylight, please turn Lux knob to ☀ (Sun) position, otherwise the sensor will not work!

5. SENSOR INFORMATION

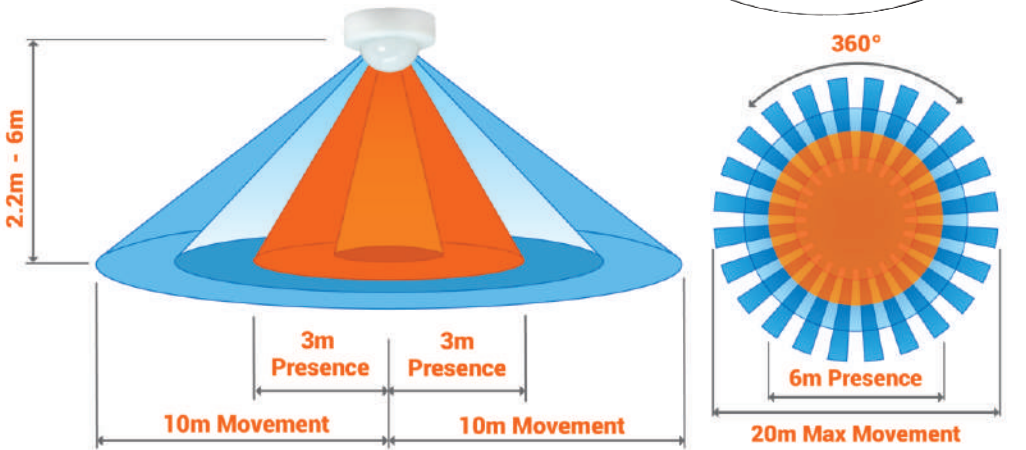

## 6. PRESENCE & PIR SENSOR INFORMATION



1. When the detection distance is less than 3 meters, the sensor detects human presence with minimal movement and keeps the connected load switched on without interruption, ensuring continuous illumination as long as presence is detected.
2. At a detection distance of 2.2 to 6 meters, the sensor operates as a conventional PIR motion sensor, this means it will detect motion and this will control the connected load.

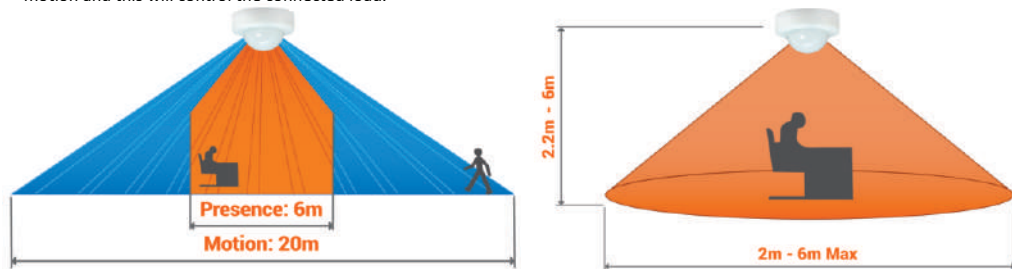


**Note:** PIR Presence Sensors, also known as PIR Occupancy Sensors, rely on line-of-sight and look for changes in heat in the detection area - if you have minimal movements or move slightly, the PIR sensor will pick up these changes and know you are there. These occupancy sensing methods help ensure that the lights or other electrical equipment systems only run when needed, saving energy without omitting you in the room.

## 7. INSTALLATION & WIRING OPTIONS

- Unscrew and remove fixing bracket from base of the sensor.
- Insert the power cable into the slot provided.
- Connect the power cable into the terminal block as per the wiring diagram.
- Identify the ideal field of view and use fixing bracket mounting holes to ensure correct alignment for motion sensor.
- Drill holes and screw the fixing bracket to the marked location.
- Reconnect the sensor to the fixing bracket and fasten the screws.
- Once installation is complete, swivel the head to point in the intended direction, secure it, and turn on the power to test.

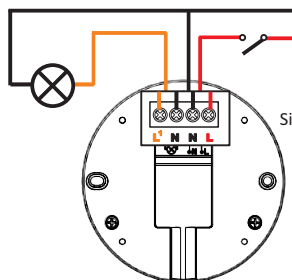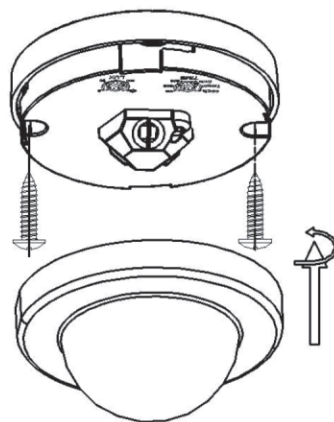

Single Sensor Installation

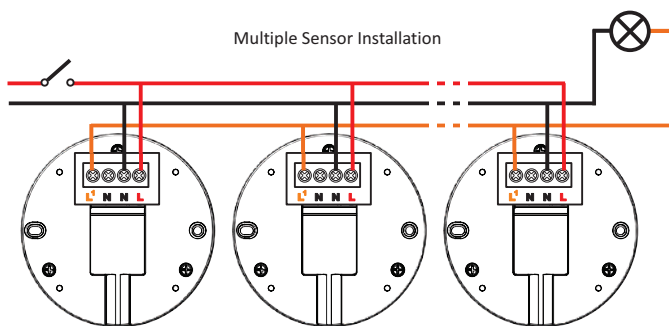

### WARNING: Danger of Death Through Electrical Shock



- Must be installed by professional electrician.
- Disconnect power source.
- Cover or shield any adjacent live components.
- Ensure device cannot be switched on.
- Check power supply is disconnected.

## 8. INSTALLATION ADVICE

- Avoid pointing the detector towards objects with highly reflective surfaces, such as mirrors etc.
- Avoid mounting the detector near heat sources, such as heating vents, air conditioning units, light etc.
- Avoid pointing the detector towards objects that may move in the wind, such as curtains, tall plants etc.



9. TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	PROPOSED SOLUTION
Light or load does not turn on when movement is detected	1. No mains voltage	<ul style="list-style-type: none"><li>• Ensure connections to the power source and load is correct</li><li>• Check the Circuit breakers and switches</li><li>• Ensure supply voltage is between 220V and 240V AC</li></ul>
	2. Surrounding light may be too bright	<ul style="list-style-type: none"><li>• Check if the Lux setting corresponds with the ambient light conditions</li><li>• Relocate the PIR sensor</li></ul>
	3. Control settings incorrect	<ul style="list-style-type: none"><li>• Check if the Time delay is set to your required settings</li><li>• Check the Lux settings</li></ul>
	4. Sensor positioning is incorrect	<ul style="list-style-type: none"><li>• Check if there is any hindrance in front of the detector which may affect the reception of signals</li><li>• Check if the ambient temperature is below 40°C</li><li>• Confirm the installation height is between 2.2m and 6m</li></ul>
Light turns ON for no apparent reason (Intermittant fault)	1. Animals, birds or pets	<ul style="list-style-type: none"><li>• This possibly could be unavoidable</li></ul>
	2. Heat sources such as air conditioners, vents or heat extractor ducts activating the sensor	<ul style="list-style-type: none"><li>• Relocate the PIR sensor</li><li>• Control settings may have been set at daytime which can affect the night distances and sensitivity. Reset at night</li></ul>
	3. Light operates during the day	<ul style="list-style-type: none"><li>• Reduce the Lux setting to the desired light setting</li></ul>
	4. Sensor affected when switching On/Off lights, fans or electrical devices on the same circuit	<ul style="list-style-type: none"><li>• Check for an arcing or faulty switches</li><li>• Connect the PIR sensor to separate circuit</li></ul>
Light remains ON continuously	1. Control settings incorrect	<ul style="list-style-type: none"><li>• Check Time delay setting</li><li>• Check the Lux levels</li></ul>
	2. False Triggering	<ul style="list-style-type: none"><li>• Redirection of PIR sensor may assist</li><li>• Check the controls for Time and Lux levels</li></ul>
	3. Interference by sunlight	<ul style="list-style-type: none"><li>• Control settings may have been set at daytime which can affect the night distances and sensitivity. Reset at night</li></ul>



**MAJOR TECH (PTY) LTD**

**South Africa**

**Australia**

 [www.major-tech.com](http://www.major-tech.com)

 [www.majortech.com.au](http://www.majortech.com.au)

 [sales@major-tech.com](mailto:sales@major-tech.com)

 [info@majortech.com.au](mailto:info@majortech.com.au)

